ПÐĹ



Video Tracker

GZ8-D2V3

User Manual


Notice


- In order to ensure the instruments are in good technical condition, the daily
 maintenance of the operating personnel is only limited to the replacement and
 inspection of cables, cleaning and functional inspection.
- Please do not open the cabinet in any case even if the system runs into malfunction. Troubleshooting has to be taken on by professional technicians after thorough examinations.
- The video tracker should be kept in a cool, dry environment for storage.
- Please make sure that the connector assemblies were inserted after aligned with sockets. Please do not pull the cable directly for unplugging.
- Wearing anti-static gloves when using and connecting the product to prevent it from being penetrated.
- The power input voltage of the IPM should be ranging between $8V\sim16V$, otherwise the device would be damaged.

Introduction


Video tracker (including video tracker ZXTP for SD and ZXTH for HD) is a device that tracks the static/moving target in the complex background of UAV and other high-speed moving platforms on a real-time basis. The video tracker could perfectly process the image affine transformation caused by the high speed movement of the platform, as well as the panning, zooming and rotation of the target. Product is composed of 3 pieces circuit board at 38mm*38mm dimensions with FPGA+ARM structure and arrives at good performance in operation and instantaneity.

List of products

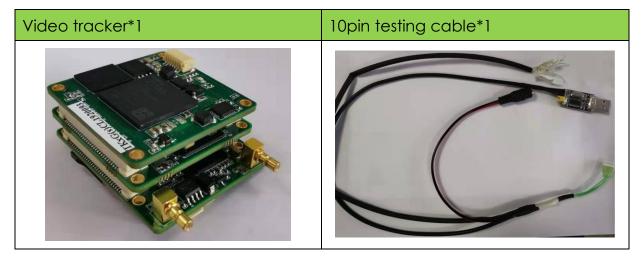

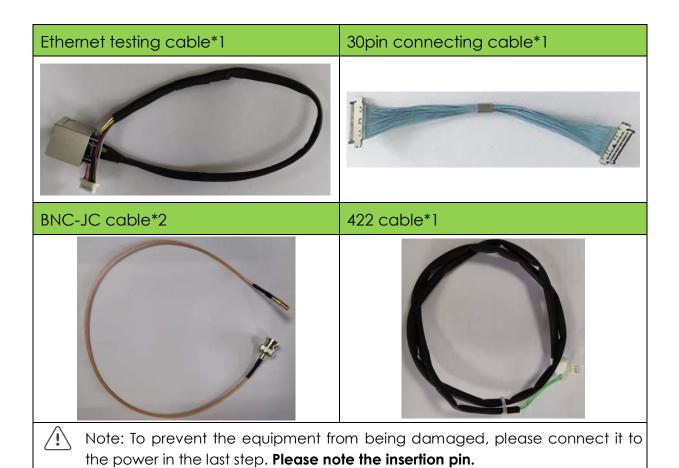

Connection specification

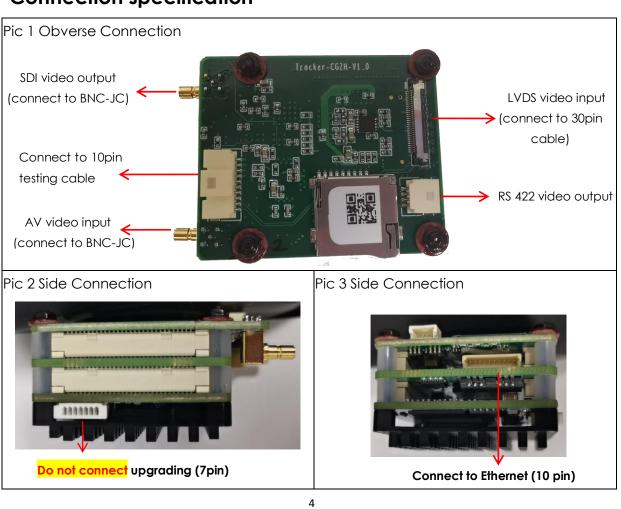


Simple malfunction diagnosis and exclusion


Please use the form below to check the video tracker when it has any trouble.


Disconnect the power and contact our technical team if problem remains.


Malfunction	Reason and solution	
	1. Check whether the power is connected.	
IPM cannot start/Power light is not on	2. Check whether the voltage is lower than required	
	which should be 12V.	
	1. Check whether the serial port is open(not serial	
	port 1)	
Na imaga dianlari	2. Check whether the baud rate setting of the	
No image display	operation software is correct.	
	3. Check whether the video output format of the	
	displayer is 1080P.	
	1. Check whether the serial port is open (not serial	
The serial command does not respond	port 1 open) Check whether the verification mode is	
	correct.	
No tuo skin a hav	1. The target is too close or not obvious, reselect	
No tracking box	target.	

Dimensions

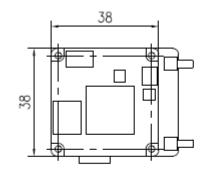

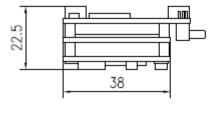


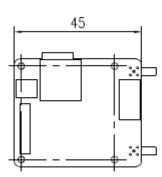

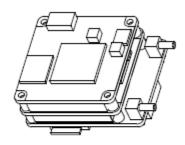


Pin definitions

422 interface 30 pin interface

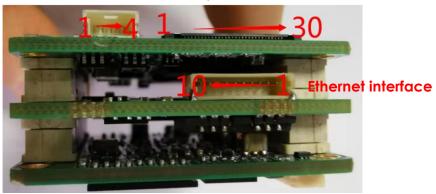

Ethernet cable pin definition			
Pin No.	Function		
1	TX_N		
2	TX_P		
3	RX_N		
4	RX_P		
422 Serial port pin de	efinition		
Pin No.	Function		
1	VCLK_P		
2	VCLK_N		
3	VDATAP		
4	VDATAN		
30 pin definition			
Pin No.	Function		
1	TXOUT3+		
2	TXOUT3-		
3	TXCLKOUT+		
4	TXCLKOUT-		
5	TXOUT2+		
6	TXOUT2-		
7	TXOUT1+		
8	TXOUT1-		
9	TXOUT0+		
10	TXOUT0-		
11	GND		
12	RXD		
13	TXD		
14-18	DC IN=12V		
19-20	GND		
21-30	NC		

Testing interface

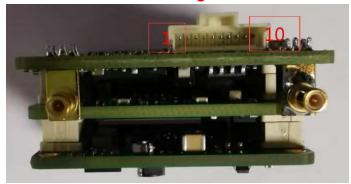

10 pin definition	
Pin No.	Function
1	12V
2	12V
3	GND
4	GND
5	TX_P
6	TX_N
7	RX_N
8	RX_P
9	SONY_TX
10	SONY_RX

Attachment 3 Communication protocol

Baud rate: 115200

Without the start bit, 8 bit data bits, 1 bit stop bit, no check

Pod output protocol (pod-tracking module)

1	Frame header	0x7E	
2	Frame header	0x7E	
3	Address	0x44	
4	Reserved	0x00	
5	Reserved	0x00	
6	working states		0x00: Imaging mode
			0x1d: Dimming mode
			0x71: Tracking mode
			0x78: Imaging setting mode
			0x7C: SD card storage mode
			0x81: Image freezing mode
			0x83: OSD setting mode
7	Imaging setting		Imaging setting mode:
	mode/SD card		0: Grayscale 1: Pseudo color fusion 2: iron
	storage switch		oxide red 3: rainbow 4: colorized
			SD card storage mode:
			1: start to store 0: stop to store 2: single crawl
			Image freezing mode:
			1: freeze 0: unfreeze
8		low 8 bits	Tracking mode
9	X-axis movement	high 8	Tracking mode
		bits	
10		low 8 bits	Tracking mode
11	Y-axis movement	high 8	Tracking mode
		bits	
12	Confirm tracking		Tracking mode
			0x00: cancel tracking; 0x01: confirm
			tracking;
9	contrast		Dimming mode
	ordinates orat		value range: 1-100 default 50
	adjustment		value range: 1-100 default 50
	adjustment		value range: 1-100 default 50
13	adjustment brightness		value range: 1-100 default 50 Dimming mode
13	brightness		Dimming mode
	brightness adjustment		Dimming mode value range: 1-100 default 50
13	brightness	low 8 bits high 8	Dimming mode

	setting	bits	
13	Temperature bar		Imaging setting mode 0: Concealing1:
			Display
14	Tracking mode	0x00	The sixth bit is the template selection flag bit, if it is 1, then specify the module size. 0x24: small template 32 0x28: middle template 64
			0x30: big template 128
			The information above can be superimposed, for example:
			0x2c is small template + middle template 0x38 is small template + big template
15	Video source	0x00	Imaging setting mode: 0x00: Visible light and infrared light (picture in picture) 0x01: infrared light; 0x02: infrared light and visible light(picture in picture); 0x03: Visible light
16	Black hot mode	0x00	Imaging setting mode: 0: White hot 1: Black hot
17	Digital zoom	0x00	Imaging setting mode 0x00:1X 0x01:2X 0x02:4X
18	Highest temperature display		Imaging setting mode 0: Concealing 1: Display
19	Lowest temperature display		Imaging setting mode 0: Concealing 1: Display
20	Pitch angle	Low eight bits	Resolution 0. 01 degree
21		High eight bits	
22	Course angle	Low eight bits	Resolution 0. 01 degree
23		High eight bits	
24	Roll angle	Low eight bits	Resolution 0. 01 degree
25		High eight bits	
26	Magnification times	Low	Default: 0x000A, 1time

	(or field angle)	eight bits	Resolution 0.1 time Resolution
27		High	
		eight bits	
28	OSD display		OSD setting mode 0: concealing 1: display
29	Reserved		
48	Checksum		

Note: A full frame of communication contains 48 bytes, and the 48th byte is checksum.

checksu	ım.		
1	Frame head	0x7E	
2	Frame head	0x7E	
3	Address	0x44	
4	Reserved	0x00	
5	Reserved	0x00	
6	Working state		0x83: OSD setting mode (HD)
7	OSD information		BITO 0: concealing OSD 1: display OSD BIT1 0: without time input 1: with time input BIT2 0: without GPS input 1: with GPS input BIT3 0: GPS is geographic coordinates 1: GPS is relative coordinates
8-9	Year	U16	
10	Month	U8	
11	Day	U8	
12	Hour	U8	
13	Minute	U8	
14	Second	U8	
16-19	Course angle	Float	
20-23	Pitch angle	Float	
24-27	Roll angle	Float	
28-35	GPS X	Double	
36-43	GPS Y	Double	
44-47	GPS Z	Float	

Tracking module output protocol (tracking module-pod)

|--|

2	Frame head	0x7E	
3	Address	0x44	
4	Reserved	0x00	Display OSD part BITO 0: Display OSD 1: Concealing OSD BIT1 0: Display middle frame/ cross 1: Concealing middle frame/ cross BIT2 0: Display attitude angle 1: Concealing attitude angle BIT3 0: Display miss distance under tracking state only 1: Display miss distance under all states BIT4 0: Display GPS 1: Concealing GPS BIT5 0: Display time 1: Concealing time BIT6 0: Display field of view/ magnification 1: Concealing field of view/ magnification BIT7 0: Small font 1: Big font
5	Reserved	0x00	
6	Working state	0x83	0x83: OSD setting mode (HD)
7	OSD information		BITO 0: 1: Save OSD setting parameter BIT1 0: without time input 1: with time input BIT2 0: without GPS input 1: with GPS input BIT3 0: GPS is geographical coordinates 1: GPS is relative coordinates BIT4 0: without platform angle input 1: with platform angle input BIT5 0: without field of view/ magnification input 1: with field of view/ magnification input

			BIT6 0: display according to
			magnification times
			1: display according to field
			angle
			BIT7 0: domestic core video
			1: sony7520 (can Not be Set)
8-9	Year	U16	
10	Month	U8	
11	Day	U8	
12	Hour	U8	
13	Minute	U8	
14	Second	U8	
16-19	Course angle	Float	
20-23	Pitch angle	Float	
24-27	Magnification times/field angle	Float	
28-35	GPS X	Double	
36-43	GPS Y	Double	
44-47	GPS Z	Float	
48	Checksum		